
YVR SHOP CAPABILITIES 2025

*Beech King Air | Boeing 737, 757, 767 | Dash 8
CRJ | DHC | ATR | SAAB | Piper | Cessna | Heli*



TABLE OF CONTENTS

Beech King Air 1900	02
Boeing 737, 757, 767	14
Dash 8	16
CRJ	20
DHC	23
ATR	29
SAAB	31
Piper	36
Cessna	40
Heli	48



BEECHCRAFT KING AIR

269 Capabilities



PN	DESCRIPTION	MODEL
011-00280-10	COMM/NAV/GPS GARMIN GNS430	1900C
011-00504-00	GPS 400	1900C
011-01057-00	GPS 400W	1900C
011-01057-40	GPS400W	1900C
011-01060-45	GNS430W	99A
064-1019-00	COMM KY-196	1900C
064-1019-05	COMM KY-196	1900C
065-0053-00	KAS-297A ALT SELECTOR	1900C
065-0053-08	KAS297A ALT SELECTOR	1900C
066-03062-0000	ENCODING ALTIMETER	1900C
066-03062-0008	ENCODING ALTIMETER KEA346	1900C
066-03064-0005	ENCODING ALTIMETER KEA130A	B300
066-04031-1121	GPS, KLN-90B	1900C
066-04031-1122	KLN90B GPS BRNAV BLK 14V/28V	1900C
066-1062-00	TRANSPONDER, KT-76A	1900C
066-1067-00	KN53 NAVIGATION/GLIDESLOPE RECEIVER	1900C
066-3024-47	KPI-552 HSI	1900C
066-3031-01	INDICATOR RADAR ALTIMETER	1900C
066-3038-00	RADIO MAGNETIC INDICATOR, KI-229	1900C
066-3062-00	SERVO ENCODING ALT	1900C
066-4010-10	NAVIGATIONAL COMPUTER	1900C
066-4010-12	NAV COMPUTER	1900C
069-1025-25	COMM NAV, KX165	99A
071-1210-17	CONTROL UNIT ADF	1900D

PN	DESCRIPTION	MODEL
0900-1840-22	EMERGENCY POWER UNIT	300
100-0051-08	PROP TACHOMETER	1900C
100-384040-3	MOTOR FLAP	1900C
100-384048-5	TORQUE PRESSURE INDICATOR	99A
101-364572-17	PC BOARD	1900C
101-364578-1	PCB -ANNUNCIATOR	1900C
101-364578-13	PCB	1900D
101-364578-7	CIRCUIT BOARD	1900C
101-364578-9	PCB	1900D
101-364580-1	PCB-ANNUNCIATOR	1900C
101-364580-11	PCB	1900C
101-364580-5	PCB, ANN FAULT DETECT	1900C
101-364582-11	CIRCUIT BOARD	1900C
101-364582-13	PC BOARD	1900C
101-364584-1	CIRCUIT BOARD, BATT/A,BIENTAIR/BRAKE DEICE	1900C
101-364668-5	FUEL TRANSFER, PCB	B300
101-364715-1	PCB - BUS TIE CONTROL	1900C
101-380068-7	AIRSPEED INDICATOR	B300
101-384028-13	SWITCH, PRESSURE	1900C
101-384159-7	N1 INDICATOR	B300
101-384233-1	INDICATOR VOLT/AMP, MD69-1	1900C
102-0041-04	HORIZON GYRO	B200
109-361016-3	CIRCUIT CARD	1900C
109-361016-5	CIRCUIT CARD	1900C
112-364021-1	RELAY BOARD	1900C

PN	DESCRIPTION	MODEL
112-364021-5	PCB	1900C
112-364032-1	PCB	1900C
114-364068-1	PRINTED CIRCUIT BOARD	1900C
114-364068-11	PCB	1900D
114-364068-3	PCB	1900C
114-364086-1	CIRCUIT BOARD	1900C
114-364093-5	BLEED AIR CONTROL PCB	1900C
114-364140-7	BLEED AIR CONTROL BOARD	1900C
114-380004-5	ITT GAUGE	1900C
114-380004-7	ITT GAUGE	1900C
114-380004-9	ITT INDICATOR	1900D
114-380005-5	INDICATOR, PRESS., TORQUE	1900C
114-380006-5	PROP RPM INDICATOR	1900C
114-380007-5	TACH INDICATOR	1900C
114-380009-3	OIL TEMP & PRES IND	1900C
114-380009-7	INDICATOR, OIL TEMP.	BEECH 1900D
114-380010-1	TURN AND BANK INDICATOR	1900C
114-380011-3	TURN & BANK INDICATOR	1900C
114-380012-3	AIRSPEED INDICATOR	1900C
114-380013-5	ATTITUDE GYRO	1900C
114-380017-3	CABIN ALTIMETER	1900C
114-380017-3ECH	CABIN ALTIMETER	1900C
114-380017-5	CABIN PRESSURE DIFFERENTIAL	1900D
114-380018-1	CABIN CLIMB RATE IND.	1900C
114-380019-1	FLAP POSITION INDICATOR	1900C

PN	DESCRIPTION	MODEL
114-380019-3	FLAP POSITION INDICATOR	1900C
114-380020-1	GAUGE, CABIN AIR TEM	1900C
114-380021-1	INDICATOR, OXYGEN QTY.	1900D
114-380026-3	SUCTION GAUGE	1900C
114-380027-3	PRESSURE GAUGE	1900C
114-380027-5	PRESSURE GAUGE	1900C
114-380031-1	DC LOAD INDICATOR	1900C
114-380032-1	DC VOLT METER	1900C
114-380033-1	VOLT FREQ, INDICATOR	1900C
114-380034-9	FUEL QTY INDICATOR	1900C
114-380035-1	VERTICAL SPEED	1900C
114-380035-3	IVSI	1900C
114-380049-11	DUAL PROP AMP INDICATOR	1900C
114-380049-5	DUAL PROP AMP INDICATOR	1900C
114-380063-5	TURBINE RPM INDICATOR	1900D
114-380065-3	TORQUE INDICATOR	1900D
114-380065-5	TORQUE INDICATOR	1900D
114-380066-3	PROP RPM	1900D
114-381023-5	DC POWER PANEL	1900C
114-381023-7	DC POWER PANEL	1900D
115-384022-1	PROP TACH IND	99
118-034535-7	AUDIO PANEL	1900C
118-034595-7	AUDIO PANEL	1900C
118-034799-7	AUDIO PANEL	1900C
118-364014-5	BOARD, PRINTED CIRCUIT	1900C

PN	DESCRIPTION	MODEL
118-380000-1	FUEL QTY IND.	1900C
129-364037-1	PCB	1900D
129-364041-5	PCB	1900D
129-364043-1	PCB, BRAKE DEICE PCB	1900D
129-364043-5	PCB BK D/IL ICE VA	1900D
129-364045-5	PCB	1900D
129-364066-5	PCB, BUS TIE CONTROL	1900D
129-364066-7	PCB, BUS TIE CONTROL	1900D
129-364079-7	PCB ANNUNCIATOR	1900D
129-364091-9	PCB, AUTOFEATHER	1900D
129-364106-1	PCB	1900D
129-364106-5	BRAKE DEICE EXT PWR MONITOR	1900D
129-380002-1	FLAP INDICATOR	1900D
129-380004-3	INDICATOR - TORQUE	1900D
129-380008-3	VACUUM GAUGE	1900D
129-380016-1	DC POWER PANEL	1900C
130-364125-9	PCB, BRAKE DEICE	B300
130-380005-3	AIRSPEED INDICATOR	B300
130-380005-7	AIRSPEED INDICATOR	1900D
130-380041-13	TURBINE TEMP GAUGE	1900D
130-380044-15	TURBINE RPM INDICATOR	1900D
130-380044-5	TURBINE RPM	Beech
130-380045-11	OIL TEMP & PRESS	1900C
130-380045-5	INDICATOR OIL/TEMP	1900D
19-20-279	INDICATOR, FLAP POSITION	1900C

PN	DESCRIPTION	MODEL
1U149-027-7	ATTITUDE GYRO	1900C
1U367-301-1	ATTITUDE GYRO	1900C
1U367-302-2	ATTITUDE GYRO	1900C
20130-11274	AIRSPEED INDICATOR	1900C
20130-11314	AIRSPEED INDICATOR	1900C
20130-11412	AIRSPEED INDICATOR	1900C
22722-034	ALTITUDE ALERTER	1900C
23-501-06-16	ATTITUDE GYRO, 5000B-36	B200
24929-412	ENCODING ALTIMETER	1900D
25100-034	IDC ALTITUDE ALERTER	200
2587193-43	GYRO C14A	1900C
2593379-001	DUAL REMOTE COMP	1900C
266-E0305-00	FDR ULD BATTERY	B300
28702-051	ENCODING ALTIMETER	1900C
28702-551	ENCODING ALTIMETER	1900C
29020-412	ALTIMETER	1900C
30-1329-3M	NAVIGATIONAL STROBE LIGHT	1900C
30030-1173	VERTICAL SPEED IND	1900D
3012-J36	INDICATOR, CABIN ALT/DIFF PRESS	1900C
30230-1174	VERTICAL SPEED INDICATOR	1900D
32848-001	NI-CAD BATTERY	1900D
4037CH	BATTERY	1900D
40576	BATTERY	1900D
4078-7	NICAD BATTERY	1900C
4099-1	TURN AND BANK INDICATOR	99A

PN	DESCRIPTION	MODEL
4200-10	ATTITUDE GYRO 2"	1900C
437-003	AUDIO CONTROL AMPLIFIER	1900D
44929-412	ENCODING ALTIMETER	1900D
45100-D4010	ALTITUDE SELECTOR	1900C
453-0150	ELT 110-4	1900C
453-0150B	ELT 110-4	200
453-5000	ELT, C406-2	1900D
453-5002	ELT, C406-1	1900C
453-5012	ELT MAIN ASSY G406-4	B300
453-5060	ELT, C406-N	1900C
453-5068	PROGRAMMING ADAPTER	B200GT
453-6603	ELT, ME406	1900C
50-389102-1	INDICATOR TEMP	99A
501-1228-03	AUX PWR SPLY PS-835C	1900C
501-1228-04	EMERGENCY PWR SUPPLY	1900D
501-1296-04	ATTITUDE GYRO	1900C
504-0022-902	HORIZON REF INDICATOR	1900C
504-0035-903	ATTITUDE GYRO	1900C
504-0038-902	ATTITUDE GYRO, 510-30B	1900C
504-0038-904	ATTITUDE GYRO	1900C
504-0042-903	GYRO	1900C
5040042903	ATTITUDE GYRO	1900C
511-0001-903	EMERGENCY POWER SUPPLY	1900C
51538-001A	G.C.U.	1900C
522-2638-006	INDICATOR COURSE 331A-3G	1900C

PN	DESCRIPTION	MODEL
522396	HYDRAULIC QTY LEVEL INDICATOR	1900C
522809	BATTERY / FUEL INDICATOR M# 9302475-001	1900C
55035-1152	CABIN ALTIMETER IND	1900C
563-267	PROP AMP IND	1900C
61-0478-1	BATTERY PACK ASSEMBLY	1900C
61-0478-9	BATTERY PACK	1900C
622-0876-001	RECEIVER VOR/LOV/GS/MB	B200
622-1204-003	INDICATOR RAD ALT	1900C
622-1270-001	TRANSPONDER, TDR-90	1900C
622-2362-001	RECEIVER, ADF, ADF-60	1900C
622-2506-014	RADIO MAG INDICATOR / RMI-36	1900C
622-2923-004	PRESELECTOR/ALERTER	B300
622-3975-004	ENCODING ALTIMETER	B300
622-3975-014	ENCOD ALT	1900D
622-4160-018	DIGITAL RADIO ALTITUDE INDICATOR	1900C
622-4565-001	VERTICAL GYRO 332D-11T	1900C
622-4565-002	VERTICAL GYRO, 332D-11T	1900C
622-4938-001	INDICATOR RADIO MAGNETIC RMI-30	1900C
622-4938-007	INDICATOR, RADIO MAGNETIC, RMI-30	1900C
622-5797-001	AIR DATA SENSOR ADS-65	1900C
622-5798-008	FLIGHT CONTROL PANEL	1900C
622-5798-022	FLIGHT CONTROL PANEL	1900D
622-5798-026	FLIGHT CONTROL PANEL	1900C
622-5812-001	FLUX DETECTOR	1900D
622-6135-014	CONTROL AND COMPENSATION UNIT, CCU-65	1900D

PN	DESCRIPTION	MODEL
622-6137-001	RCVR, VOR/ILS/MKR VIR-32	1900C
622-6137-201	VHF NAV VIR-32	1900C
622-6152-001	COMM VHF22A	1900C
622-6152-011	COMM VHF-22A	1900D
622-6200-001	HSI CONTROL PANEL	1900C
622-6200-002	HSI CONTROL PANEL	1900C
622-6263-003	TRANSMITTER DME- 42	1900D
622-6520-008	CONTROL, VHF COM, CTL-22	1900C
622-6521-001	CONTROL, NAV, CTL-32	1900D
622-6521-011	CONTROL, NAV, CTL-32	1900C
622-6521-016	CONTROL, NAV, CTL-32	1900C
622-6521-025	CONTROL, NAV, CTL-32	1900C
622-6522-003	CONTROL, ADF, CTL-62	1900D
622-6522-008	CONTROL, ADF, CTL-62	1900C
622-6523-008	CONTROL, XPDR, CTL-92	1900C
622-6523-207	CONTROL, XPDR, CTL-92	1900C
622-6523-208	CONTROL, XPDR, CTL-92	1900C
622-6524-003	INDICATOR, DME, IND-42A	1900C
622-6524-004	INDICATOR DME IND-42A	1900C
622-6590-001	CONTROL ADAPTER CAD-62	1900C
622-6684-002	A/P CTL PANEL	BEECH 1900D
622-9683-111	DISPLAY SELECT PANEL, DSP-84	1900D
634-4005-001	COLLINS ROTORS, 332D	1900D
634-4320-003	INCLINOMETER	1900D
635-0053-901	BEARING HOUSING	1900C

PN	DESCRIPTION	MODEL
653-3275-011	PCB, RECEIVER CARD ASSEMBLY A2	1900C
7000622-901	GYRO VERTICAL	1900C
7130B	INSTANTANEOUS VERTICAL SPEED IND.	1900C
7130B-C.71	INSTANTANEOUS VERTICAL SPEED IND.	1900C
787-6173-016	FLIGHT DIRECTOR INDICATOR, ADI-84	1900C
792-6694-001	VERTICAL GYRO, 332D-11A	1900C
81-208-1	FUEL QTY. INDICATOR	1900C
827-0292-001	SHIELD, HIRF	B200
9015607	BATTERY, STANDBY	1900C
9016925	SEALED BATTERY, LEAD ACID	1900C
9121-836-104	RUDDER LIMITER UNIT	1900C
97-384009-1	OIL PRESS /SW INDICATOR	99
9750W0370	BATTERY	1900D
99-384030-5	PRESS TORQUE INDICATOR	99A
99-389014-3	TRANSMITTER	1900C
A3-06-2749-1	ELT1000, P/N: 8201	200
AN3025-1	GENERATOR CONTROL RELAY	99
C4550110002	ALTIMETER, ENCODER	1900C
DK100	ULB	1900C
DK120	BEACON	1900C
DK120/90	BEACON	BEECH 1900D
DMELT8.1	ELT	1900C
ELT 8.1	ELT	B200
ELT-10	ELT	1900C
ELT110-4	ELT	1900C

PN	DESCRIPTION	MODEL
MD-109-1	LOAD INDICATOR	1900C
MD110-1	VOLT INDICATOR	1900C
MD41-1248	TAWS ANNUN/CTL UNIT 28VDC	1900C
MD41-1408A	ANNUNCIATOR, GPS	1900C
MD41-248	24 POLE REMOTE RELAY	1900C
MD835-1	EMERGENCY POWER SUPPLY LITHIUM	1900C
PC-15BC()	STATIC INVERTER	1900C
PC-250	INVERTER STATIC	1900C
PC-350	INVERTER	1900C
RCA41-03	TACHOMETER, NG	1900C
RCA41B-02	Ng INDICATOR	1900C
RG-380E/60K	BATTERY	1900C
S1821502-02	ELT - KANNAD - 406 AF	1900C
S1840501-01	ELT, 406 AF-COMPACT	1900C
SPC-10 (PW)	STATIC INVERTER	1900C
SPC-38	STATIC INVERTER	1900C
SPC-38()	STATIC INVERTER	1900C
SR-2AK	TORQUE PRESS INDICATOR	99A
SRL-C2K	INDICATOR, PRESS., TORQUE	1900C
VR-1010-24-2B	VOLTAGE REGULATOR	Beech

BOEING 737, 757, 767

15 Capabilities



PN	DESCRIPTION	MODEL
016392-000	40176-7 BATTERY	737-300
01N65900	ELT	767-328
01N65920	PORTABLE ELT	737 NG
024147-000	BATTERY, 539CH-1	737-8
10166N01N00	INDICATOR RUDDER TRIM	737 NG
40176-7	BATTERY, NI CAD	737-300
453-5000	ELT, C406-2	737 NG
453-5000-(316)	ELT, C406-2	737-7CT
453-5002	ELT, C406-1	757-2B7
453-5004	ELT, B406-4	737
51090368-1	RESCU 406SG ELT	737 NG
AD-2013-1A	BATTERY ASSY	737-300
AW2835AB06	INDICATOR ALTM AND DFNTL PRES	737 NG
DK120/90	BEACON	757-223
WL501RC1	CABIN CLIMB INDICATOR	737 NG

DE HAVILLAND CANADA DASH 8

76 Capabilities



PN	DESCRIPTION	MODEL
02-0861-08	TRANSISTOR, PNP	DHC8-102
020413-000	BATTERY AUX	DH8 - 100
03-0044-29	TRANSISTOR, PNP	DHC8-102
03-0156-447	CAPACITOR, 0.47uF/50V	DHC8-102
064-1023-00	TRANSCEIVER, VHF COMM, KTR-908	DH8 - 100
064-1023-06	VHF COMM	DH8
071-1210-17	CONTROL UNIT ADF	DH8
071-1215-31	VHF CONTROL HEAD - KFS 598	DHC-8-102
071-1282-71	CONTROL, VHF COMM, KFS-598A	DHC-8-102
071-1283-26	HEAD OPS/TRK NAV CONTROL, KFS 564A	DH8 - 100
071-1284-17	CONTROL PANEL ADF / KFS586A	DHC-8-102
073-00550-0002	SHAFT W/F L=.765	DHC-8-102
10013-0000-02	INDICATOR FUEL QTY	DHC-8-102
10167N01W00	INDICATOR TORQUE	DHC-8-102
10169N02R00	INDICATOR PROP RPM	DHC-8-102
11-4157-9	BOARD-CIRCUIT	DHC-8-314
1152112-2	BATTERY	DHC-8 400
12277-2	BATTERY AUX	DH8 - 100
20412	SAFT BATTERY	DH8 - 100
20413	#15 AMP AUX BATTERY	DHC-8-102
21140-1150	AIRSPEED INDICATOR	DHC-8-311
2587193-43	GYRO C14A	DH8 - 100
30441-001	BATTERY	DHC-8-102
40-603-4	INDICATOR PFCS	DHC-8-102
401176-9	BATTERY MAIN	DH8

PN	DESCRIPTION	MODEL
416381	BATTERY	DH
4428-150-80-11	INDICATOR-FLAP CONTROL	DHC-8-102
453-5000	ELT, C406-2	DH8
453-5000-(999)	ELT, C406-2	DHC-8-102
5063-1	PANEL JACK	DH8 - 100
51539-008C	CNT UNIT GENERATOR (GCU)	DH8 - 100
51539-008D	CONTROL UNIT-DC GENERATOR	DH8 - 100
51539-021A	CONTROLLER DC GENERATOR	DASH 8
51608-003	GENERATOR CONTROL UNIT	DH8
522459	CABIN DUCT TEMP INDICATOR	DHC-8 311A
522487-1	MONITOR BATTERY TEMP	DHC-8-102
522778	MONITOR DC POWER	DH8
522808	AC POWER MONITOR	DH8 - 100
5261-1	AUDIO PANEL	DH8
535201-1	SELECTOR LANDING GEAR	DH8 - 100
5383-1	INTERPHONE HANDSET/CRADLE	DHC-8-102
60-3844-3	POWER SUPPLY WITH BATTERY	DHC-8-102
61-0478-1	BATTERY PACK ASSEMBLY	DHC-8-102
61-0478-11	BATTERY PACK ASSEMBLY	DH8
61-0478-9	BATTERY PACK	DH8
622-1270-001	TRANSPONDER, TDR-90	DH8 - 300
622-2362-001	RECEIVER, ADF, ADF-60	DHC-8-311
622-6136-002	DIRECTIONAL GYRO, DGS-65	DH8
622-6522-001	CONTROL, ADF, CTL-62	DH8 - 300
65-0075-1	MASTER CAUTION INDICATOR	DH8 - 100

PN	DESCRIPTION	MODEL
70-0253-7	UNIT CONTROL ASSY, ADVISORY LIGHTS	DHC-8-102
7001179-951	INDICATOR HSI, RD 550A	DH8 - 100
7001182-913	ATTITUDE DIRECTOR INDICATOR AD-550C	DH8
7004577-903	ALT PRE SELECT - AL 801	DHC-8-311
75-0434-1	PANEL MASTER WARNING	DHC-8-102
80-0535-15	PANEL	DH8 - 100
80-0535-25	PANEL	DHC-8-311
82410253-001	FIRE WARNING PANEL ASSY	DHC-8-102
9750W0370-6	BATTERY LEAD ACID	DH8
A1214427	LAMP	DHC-8-314
AA95-962	AUDIO PANEL	DHC-8-102
AD-401176-9	BATTERY - 40 AMP	DH8
AD-61-0478-11	BATTERY ASSY	DH8
AD-61-0478-9	BATTERY ASSY	DH8
BYLF50313	SENSOR CABIN TEMP	DHC-8-102
DH-1030-24-600-CSIIB	TRANSVERTER	DH8 - 100
DH1030-115/3-1200SSIID	CNTRL BOX PARALLEL	DHC-8-311
DK120/90	BEACON	DH8 - 100
H321AA203	CASING PRINCIPAL GIMBAL	DHC-8-202
H321ALM1	GYRO HORIZON	DASH 8
H321CC202	GYROSCOPE ASSY	DHC-8-202
M39016/6-109L	RELAY	DHC-8-311
S1850501-02	ELT INTEGRA AP	DH8 - 400
SEDL-0C2P	INDICATOR ENG TQ	DHC-8-102
SHURE1	HAND MIC	DHC-8-102
SYLZ50970	CONTROLLER WINDSHIELD TEMP	DHC-8-102

BOMBARDIER CRJ

31 Capabilities



PN	DESCRIPTION	MODEL
024147-000	BATTERY, 539CH-1	BOMBARDIER
024453-000	BATTERY APU	CL-600-2B16
024637-000	BATTERY, NI-CAD	CL-600-2B16
1611AM8	ALTIMETER	CL600-2B16
1659-1	CONTROLLER TEMP WINDSHIELD	CRJ
1756-3	BATTERY 20 AMP	CL-600-2B16
237BC101-1	BATTERY CHARGER	CL-600-2B19
3876280-1	IGNITION UNIT	CRJ
453-4010	DONGLE	CRJ
453-5000	ELT, C406-2	CL-600
453-5002	ELT, C406-1	CL-215-6B11 (Series CL-215T)
453-5002-(366)	ELT C406-1	CRJ
453-5060	ELT, C406-N	CL-600-2B16
500-12Y	ELT (TYPE S)	CL600-2B16
501-1712-02	PS-855B, EMERGENCY POWER SUPPLY	CL-600-2B16
60-1321-1	BATTERY POWER SUPPLY	CL-600-2B16
600-59151-11	BATTERY APU	CL-600-2B16
600-59151-13	BATTERY APU	CL-600-2B16
601R59041-3	BATTERY MAIN NICAD	CL-600-2B16
61-0478-11	BATTERY PACK ASSEMBLY	BOMBARDIER
61-2275-1	BATTERY PACK / POWER SUPPLY	BOMBARDIER
622-6520-008	CONTROL, VHF COM, CTL-22	CL-215-6B11 (Series CL-215T)
622-6521-012	CONTROL, NAV, CTL-32	CL-215-6B11 (Series CL-215T)
622-6522-008	CONTROL, ADF, CTL-62	CRJ100/200
622-6523-008	CONTROL, XPDR, CTL-92	CL-215-6B11 (Series CL-215T)

PN	DESCRIPTION	MODEL
804747	SEALED NI-CD BATTERY	BOMBARDIER
DK120	BEACON	CL-600-2B16
G-246	BATTERY	BOMBARDIER
GL511-2201-5	BATTERY	CL-600-2B16
GL511-2301-5	BATTERY	CL-600-2B16
TM43335110-1	POWER SUPPLY	CL-600-2B16

DE HAVILLAND CANADA DHC - 2, 3, 5, 6

112 Capabilities



PN	DESCRIPTION	MODEL
010-00967-00	GPS, AERA795	DHC-3
011-00280-10	COMM/NAV/GPS GARMIN GNS430	DHC-2 MK. III
011-00401-10	AUDIO PANEL GMA-340	DHC-3
011-00490-00	TRANSPONDER, GTX 327	DHC-2 MK. I
011-00728-00	GTX 320A TRANSPONDER	DHC-2
011-00940-01	GNS 530	DHC-2 MK. III
011-01057-00	GPS 400W	DHC-2 MK. I
011-02718-00	VHF/COM, GTR 225, UNIT ONLY	DHC-3
027-1000-7	MANIFOLD PRESSURE GAUGE	DHC-2 MK. I
060-0015-00	DIRECTIONAL GYRO, KG-102A	DHC-6-200
064-1019-00	COMM KY-196	DHC-2 MK. I
064-1019-05	COMM KY-196	DHC-2 MK. III
064-1051-60	VHF COMM	DHC-2 MK. I
064-1051-70	KY-97A VHF COMM TRANSCEIVER	DHC-2 MK. I
064-1052-60	VHF COMMUNICATION TRANSCEIVER, KY 96A	DHC-2
064-1052-70	VHF COMM KY-96A	DHC-2
064-1054-30	TRANSCEIVER, VHF COMM, KY-196A	DHC-2 MK. I
066-01141-5101	TRANSPONDER ATC, KT71	DHC-2 MK. I
066-1055-70	AUDIO PANEL, KMA-24H	DHC-2 MK. I
066-1055-71	AUDIO PANEL, KMA-24H	DHC-2 MK. I
066-1062-00	TRANSPONDER, KT-76A	DHC-2
066-1062-02	ATC XPDR	DHC-2 MK. I
066-1062-10	TRANSPONDER, KT-76A	DHC-2 MK. I
066-1064-00	KN-62 DME	DHC-6
066-1068-00	DME RECEIVER, KN 62	DHC-6

PN	DESCRIPTION	MODEL
066-1072-00	RECEIVER, ADF, KR-87	DHC-6
066-3046-00	KI-525A PICTORIAL NAVIGATION INDICATOR	DHC-6-200
069-01034-0101	KLN94 COLOR GPS	DHC-2 MK. I
069-01034-0102	KLN94 GPS RCVR	DHC-2 MK. I
069-1024-04	TRANSCEIVER, NAV/COMM, KX-155 (28V)	DHC-3
069-1024-34	TRANSCEIVER, NAV/COMM, KX-155 (28V)	DHC-3
069-1024-35	TRANSCEIVER, NAV/COMM, KX-155 (28V)	DHC-2 MK. III
069-1024-39	TRANSCEIVER, NAV/COMM, KX-155 (28V)	DHC-3
069-1024-43	TRANSCEIVER, NAV/COMM/GS, KX-155 (28V)	DHC-3
069-1025-05	VHF COMM TX/NAV RCVR	DHC-2 MK. I
069-1025-25	COMM NAV, KX165	DHC-2 MK. I
102-0041-04	HORIZON GYRO	DHC-2
11932	INTERCOM PM3000	DHC-2
11957	PCD7100-1 CD PLAYER/RECORDER	DHC-3
14TC122	TRIPLE ENGINE GAUGE	DHC-2 MK. I
152B206	TEMP, INDICATOR	DHC-2 MK. III
1636-6A-B1	CLIMB IND	DHC-2 MK. I
195-1SC422-3	TRIPLE ENGINE GAUGE	DHC-2 MK. I
1U262-001-39	DIRECTIONAL GYRO 4000B-30	DHC-2
23-501-06-16	ATTITUDE GYRO, 5000B-36	DHC-2 MK. III
2587193-43	GYRO C14A	DHC-6 SERIES 200
3000-10	E.L.T.	DHC-2 MK. I
32164-000	TACH. GEN	DHC-3
332-00140	TORQUE GAUGE	DHC-2 MK. III
33351	ENGINE GAUGE AN5773-1	DHC-2 MK. I

PN	DESCRIPTION	MODEL
371K-05	ALTIMETER	DHC-2 MK. I
3D1472-11	TIMER DE-ICE	DHC-7-103
4076	NICAD BATTERY	DHC-2 MK. III
418-00044	OIL PRESSURE TRANSMITTER	DHC-2 MK. III
418-02064	TRANSMITTER PRESSURE, OIL	DHC-3
430-6040-203	SL-40 VHF COMM	DHC-2 MK. I
430-6040-301	VHF NAV/COMM SL30	DHC-6 SERIES 200
430-6040-303	SL-30 NAV/COMM	DHC-6 SERIES 200
453-0150	ELT 110-4	DHC-2 MK. I
453-0150-A1	ELT-100	DHC-2 MK. I
453-0190	ELT-200	DHC-2 MK. III
453-4010	DONGLE	DHC-2 MK. I
453-5012	ELT MAIN ASSY G406-4	DHC-2
453-5060	ELT, C406-N	DHC-2
453-5068	PROGRAMMING ADAPTER	DHC-6 SERIES 400
453-6603	ELT, ME406	DHC-2
522-3082-00	COURSE INDICATOR	DHC-6 SERIES 200
5934P-3	ALTIMETER 20K	DHC-2 MK. I
5934P-3A.83	ALTIMETER 20K, In.	DHC-2 MK. I
5934PA-3A.86	ALTIMETER 35K, In.	DHC-6 SERIES 200
5934PD-3	ALTIMETER	DHC-3
671K-10-MOD2	ALTIMETER	DHC-2
6748-157	MANIFOLD PRESSURE IND	DHC-2 MK. I
8000.B166	AIRSPEED INDICATOR	DHC-2
841	INDICATOR, CYL.. TEMP	DHC-2 MK. I

PN	DESCRIPTION	MODEL
841.7Y1	CYLINDER HEAD TEMP INDICATOR	DHC-2 MK. I
8DJ13AAS23	TACHOMETER	DHC-2 MK. I
8DJ43AAM	TACHOMETER	DHC-2 MK. III
8DJ54GAF-SUB2	FUEL QUANTITY INDICATOR	DHC-2 MK. I
8DJ81CAA	ELECTRONIC TACHOMETER	DHC-2 MK. III
962831A-1-S-8	ADC2000	DHC-3
A3-06-2880	ELT 345	DHC-2
AA80-062	ICS W/PTT	DHC-2
AK-450	ELT	DHC-2 MK. I
AK-451-()	ELT	DHC-2 MK. III
AN5770-1	MANIFOLD PRESSURE GAGE	DHC-2 MK. I
AN5790-6	TEMP GAUGE	DHC-2 MK. I
APTE-548-2250-70D	TRANSDUCER, TORQUE PRESSURE	DHC-5
AW-2 3/4-16	AIRSPEED INDICATOR	DHC-2 MK. I
AW-2 3/4-20-C	AIRSPEED INDICATOR	DHC-2 MK. I
AW-2-3/4-20-B	AIRSPEED INDICATOR	DHC-3
B0020 14211	ALTIMETER, PRESSURE	DHC-2 MK. I
C-4000	ELT	DHC-2 MK. I
C661011-0105	ALTIMETER	DHC-2 MK. I
C6NF1117-1	CTRL BETA BACKUP BOX	DHC-6 SERIES 200
CT2N1068-1	BETA BACKUP CONTROL BOX	DHC-2 MK. III
D1-112-5028	TACH INDICATOR	DHC-2 MK. I
E-01	ELT	DHC-2 MK. III
E-04	ELT 406 MHZ	DHC-2
ELT-10	ELT	DHC-2

PN	DESCRIPTION	MODEL
G993-01-1B	INDICATOR, VERTICAL SPEED	DHC-3
H10-30	HEADSET	DHC-5
HEADSET	HEADSET	DHC-2
KPN-071-1041-01	VOLTAGE CONVERTER	DHC-3
MD26-28	INVERTER, DC-AC	DHC-2 MK. III
MD41-1108	ACU, TERRAIN AWARENESS	DHC-6-300
RC-60MS	INDICATOR, RATE OF CLIMB	DHC-2 MK. I
S1840501-01	ELT, 406 AF-COMPACT	DHC-2
S1840501-01M	ELT	DHC-6-200
S1851501-02	Kannad Integra AF ELT	DHC-2 MK. III
VR-1010-24-1A	DC VOLTAGE REGULATOR	DHC-6-300
VR-1010-24-2A	VOLTAGE REGULATOR	DHC-6

AVERAGE TRUE RANGE (ATR)

2 Capabilities



PN	DESCRIPTION	MODEL
H321BDM1	GYRO HORIZON	ATR 42-320
H321BDM1	GYRO HORIZON	ATR 72-202

SAAB AB

92 Capabilities



PN	DESCRIPTION	MODEL
064-1019-00	COMM KY-196	SAAB 340B
064-1023-00	TRANSCEIVER, VHF COMM, KTR-908	SAAB SF340A
064-1023-04	KTR908 VHF	SAAB SF340A
066-04031-1122	KLN90B GPS BRNAV BLK 14V/28V	SAAB 340B
066-04034-0204	KLN 900 GPS PMO GR	340B
066-1062-00	TRANSPONDER, KT-76A	SAAB 340B
066-1067-00	KN53 NAVIGATION/GLIDESLOPE RECEIVER	SAAB 340B
066-1072-00	RECEIVER, ADF, KR-87	340/580
066-1077-00	RECEIVER, ADF, KDF-806	SAAB SF340A
066-3034-22	VOR/LOC/CONV & GS IND.	SAAB 340B
069-01034-0102	KLN94 GPS RCVR	340
071-01507-2001	KFS-578A TCAS CONTROL HEAD	SAAB SF340A
071-01507-5603	TCAS II CTL 5VG O/O NO RNG	SAAB SF340A
071-1210-17	CONTROL UNIT ADF	SF340A
071-1215-61	VHF COMM CONTROL	SF340A
071-1276-11	ATC XPDR CONTROL	SF340A
071-1282-31	VHF COMM CTRL (KFS598A)	SAAB SF340A
071-1283-26	HEAD OPS/TRK NAV CONTROL, KFS 564A	SF340A
10010-0000-02	INDICATOR FUEL QTY	340B
10225N01W00	PERCENT TORQUE INDICATOR	SAAB 340B
130538-1	CABIN AIR PRESS CONTROL	340B
2117966-2	CABIN AIR PRESSURE CONTROLLER	SAAB SF340A
2229949-1	FLIGHT DATA ENTRY PANEL	SAAB 340B
270-2196-030	AIRSPEED SENSOR	SAAB SF340A
32848-001	NI-CAD BATTERY	340B

PN	DESCRIPTION	MODEL
4078-7	NICAD BATTERY	340B
410669	TEMP SENSOR	SAAB 340B
414471	NI-CAD BATTERY	SAAB 340B
447CH7	NI-CAD AIRCRAFT BATTERY	340B
453-5000	ELT, C406-2	SAAB SF340A
453-5002	ELT, C406-1	340
501-1228-04	EMERGENCY PWR SUPPLY	340B
501-1712-02	PS-855B, EMERGENCY POWER SUPPLY	SAAB 340B
502-0011-003	AUDIO PANEL	SAAB 340B
51539-007B	DC GENERATOR CONTROL UNIT	340B
520-3337-117	RADIO MAGNETIC INDICATOR	SAAB 340B
522-2638-006	INDICATOR COURSE 331A-3G	SAAB 340B
522406	VOLT AMMETER	SAAB 340B
522781	FUEL TOTALIZER	SAAB SF340A
522783	CABIN PRESSURE IND.	SAAB SF340A
522792	PROP. SPEED IND	SAAB 340B
522793	GAS GEN SPEED INDICATOR	SAAB 340
522794	INDICATOR, ENG OIL PRES/TEMP	340B
522795	INDICATOR PGB OIL PRESS/TEMP	340B
522809	BATTERY / FUEL INDICATOR M# 9302475-001	SAAB SF340A
522858	FLAP POSITION DUAL INDICATOR	340B
522948	TORQUE INDICATOR	SAAB SF340A
523250	HYDRAULIC PRESSURE INDICATOR	SAAB SF340A
523347	INTERTURBINE TEMP IND	SAAB SF340A
523535	INDICATOR, PROP OIL PX/TEMP	340B

PN	DESCRIPTION	MODEL
60-1321-1	BATTERY POWER SUPPLY	340B
61-0478-1	BATTERY PACK ASSEMBLY	340B
61-0478-9	BATTERY PACK	340B
61-0479-9	POWER SUPPLY	SAAB 340B
622-1270-001	TRANSPONDER, TDR-90	SAAB SF340A
622-2362-001	RECEIVER, ADF, ADF-60	340B
622-3975-001	ENCODING ALTIMETER ALI-80A	340B
622-5353-011	AIRSPEED INDICATOR, ASI-80E	SAAB 340B
622-6137-001	RCVR, VOR/ILS/MKR VIR-32	340B
622-6152-011	COMM VHF-22A	SAAB 340
622-6209-008	MODE SELECT PANEL, MSP-85	SAAB 340B
622-6263-003	TRANSMITTER DME- 42	340B
622-6520-008	CONTROL, VHF COM, CTL-22	SF340A
622-6520-009	CONTROL, VHF COM, CTL-22	340B
622-6521-025	CONTROL, NAV, CTL-32	340B
622-6522-008	CONTROL, ADF, CTL-62	SAAB SF340A
622-6522-017	CONTROL, ADF, CTL-62	340B
622-6523-205	CONTROL, XPDR, CTL-92	SAAB SF340A
622-6523-213	CONTROL, XPDR, CTL-92	340B
622-6728-011	AIRSPEED INDICATOR, ASI-80F	SAAB SF340A
622-9722-035	PRESELECTOR/ALERter	340B
64060-890-1	MAASI	SAAB SF340A
64111-900-1	ALTIMETER	SAAB 340
64141-370-1	STANDBY ALTIMETER	340B
9015607	BATTERY, STANDBY	SAAB 340B

PN	DESCRIPTION	MODEL
9121-836-104	RUDDER LIMITER UNIT	340B
95210000-20	ELT, 121.5/243 MHZ	340B
9750W0538	BATTERY, LEAD ACID	SAAB 340B
A3-06-3005	ELT4000, MAIN	SAAB 340B
AD-4078-7	NICAD BATTERY	340B
AD-61-0478-9	BATTERY ASSY	340B
B13-941.22.05.2.0	CLOCK, ACFT. MECH.	SAAB SF340A
C4550110002	ALTIMETER, ENCODER	SAAB 340B
D3337L-B-2-1-S/SB-1	RADIO MAGNETICS INDICATOR	SAAB 340B
DK120	BEACON	340B
DMELT8.1	ELT	SF340A
ELT-10	ELT	340
ELT97A25600000000	ELT	SAAB 340
H341ADM2	HORIZON GYRO	340B
M4401D-8A	AVIONICS FAN	340B
PC-250	INVERTER STATIC	SF340A
RG-380E/60K	BATTERY	SAAB 340B

PIPER AIRCRAFT

53 Capabilities



PN	DESCRIPTION	MODEL
011-00259-10	GTX320 TRANSPONDER	PA-34-200T
011-00401-10	AUDIO PANEL GMA-340	PA-31-350
011-00490-00	TRANSPONDER, GTX 327	PA-28-140
011-00728-00	GTX 320A TRANSPONDER	PA-31-350
011-02806-40	GNC255A	PA-28-151
020413-000	BATTERY AUX	PA-18-150
066-01156-0101	TRANSCEIVER, XPDR, KT-76C	PA-31-325
066-1055-02	AUDIO PANEL, KMA-24H	PA-46-310P
066-1062-00	TRANSPONDER, KT-76A	PA-31-350
066-1068-01	DME TRANSCEIVER, KN 62A	PA-31-350
066-1072-00	RECEIVER, ADF, KR-87	PA-23-250
066-1088-00	DME	PA-31-350
066-3031-01	INDICATOR RADAR ALTIMETER	PA-31T
066-3034-02	VOR/LOC/CONV. & G.S. INDICATOR	PA-31P-350
066-3034-04	VOR/LOC/G.S. INDICATOR	PA-31-350
066-3046-00	KI-525A PICTORIAL NAVIGATION INDICATOR	PA-31-350
066-3056-01	VOR/LOC CONVERTER	PA-23-250
066-3059-01	ADF IND	PA-31-350
066-4008-00	VOR/LOC/DME/RNAV/GS	PA-31-350
069-1020-00	NAV/COMM	PA-31-350
069-1024-01	TRANSCEIVER, NAV/COMM, KX-155 (14V)	PA-23-250
069-1024-35	TRANSCEIVER, NAV/COMM, KX-155 (28V)	PA-31-350
069-1024-42	TRANSCEIVER, NAV/COMM, KX-155 (14V)	PA-23-250
18P200-2	TRI-GAUGE	PA-31-350
1U262-001-39	DIRECTIONAL GYRO 4000B-30	PA-31-350

PN	DESCRIPTION	MODEL
1U378-003-4	TRIPLE ENGINE GAUGE	PA-31-350
1U378-003-4A	GAUGE ENGINE	PA-31-350
200-1909-00	KI256 ROTOR	PA-31P-350
22-804-020-2	TRIPLE ENG GAGE	PA31-350
23-501-05-2	HORIZON INDICATOR	PA-23-250
23-501-06-16	ATTITUDE GYRO, 5000B-36	PA-31-325
453-0150	ELT 110-4	PA-31-350
453-0190	ELT-200	PA-23-250
453-5060	ELT, C406-N	PA-31-350
453-6603	ELT, ME406	PA-23-250
453-6604	ELT ME406HM	PA-28-140
57-5AW	TWIN-TACH	PA-31-350
622-2080-011	NAV RCVR	PA-31-350
622-6521-016	CONTROL, NAV, CTL-32	PA-28R-201T
7000C.26	VERTICAL SPEED INDICATOR	PA-28R-201T
721-03-1710	MANIFOLD PRESS AND FUEL PRESS INDICATOR	PA-28R-200
76B711	EGT INDICATOR	PA-31-350
A3-06-2880	ELT 345	PA-18-135
E-01	ELT	PA-31-350
E-04	ELT 406 MHZ	PA-24
ELT-10	ELT	PA-23-250
LA-71-11	ALTIMETER	PA-31-350
MD41-628	ACU	PA-31-350
MODEL 4000 (AF) (AP)	ELT	PA-28-180
RG-380E/44	LEAD ACID BATTERY	PA-28-180

PN	DESCRIPTION	MODEL
RG24-20	BATTERY	PA-31-325
S1821502-02	ELT - KANNAD - 406 AF	PA-31
SSD120-30A	ALTITUDE DIGITIZER	PA-28-151

CESSNA AIRCRAFT

160 Capabilities



PN	DESCRIPTION	MODEL
011-00455-00	GTX 330 XPDR	150M
011-00490-00	TRANSPONDER, GTX 327	172M
011-00504-10	GPS-400 GPS RECEIVER	560 ENCORE
011-00728-00	GTX 320A TRANSPONDER	152
011-01060-00	GPS DISPLAY NAV; GNS 430W	208B
011-01061-00	GNS 430AW	690A
023167-000	NI-CAD BATTERY	680
060-0015-00	DIRECTIONAL GYRO, KG-102A	208B
060-0017-00	KI 256 FLIGHT DIRECTOR INDICATOR	208B
064-1019-00	COMM KY-196	206B
064-1051-60	VHF COMM	172K
064-1051-70	KY-97A VHF COMM TRANSCEIVER	172M
064-1052-70	VHF COMM KY-96A	172N
064-1054-30	TRANSCEIVER, VHF COMM, KY-196A	206B
065-00183-0501	FLIGHT CONTROL COMPUTER	208
065-0042-03	FLIGHT COMPUTER	208B
065-0042-15	COMPUTER, FLIGHT	208B
065-0058-01	ANNUNCIATOR PANEL, KA-185	208B
066-01141-0101	TRANSPONDER, KT70	208B
066-01141-5101	TRANSPONDER ATC, KT71	208
066-01148-0102	KLN 89B BRNAV GPS TSO	208B
066-01156-0101	TRANSCEIVER, XPDR, KT-76C	172R
066-03064-0002	ENCODING ALTIMETER	208B
066-03064-0005	ENCODING ALTIMETER KEA130A	208
066-1053-00	TRANSPONDER KT-79	208

PN	DESCRIPTION	MODEL
066-1055-02	AUDIO PANEL, KMA-24H	208B
066-1055-70	AUDIO PANEL, KMA-24H	208B
066-1062-00	TRANSPONDER, KT-76A	180J
066-1062-01	TRANSPONDER KT78A	C24R
066-1062-10	TRANSPONDER, KT-76A	U206G
066-1069-00	DME INDICATOR	208B
066-1072-00	RECEIVER, ADF, KR-87	208B
066-1072-04	RECEIVER, ADF, KR-87	208
066-3034-04	VOR/LOC/G.S. INDICATOR	208B
066-3046-00	KI-525A PICTORIAL NAVIGATION INDICATOR	208B
066-3046-01	PICTORIAL NAVIGATION	208B
066-3046-07	PICTORIAL NAV IND, KI 525A	208B
066-3054-01	INDICATOR RAD/ALT	208B
066-3056-00	VOR/LOC CONVERTER INDICATOR	152
066-3056-01	VOR/LOC CONVERTER	152
066-3059-01	ADF IND	208B
066-3063-00	ADF IND	208B
066-3063-01	ADF INDICATOR	208B
069-01032-0201	NAV/COM 25KHZ 28V (NO G/S)	182S
069-01034-0101	KLN94 COLOR GPS	690A
069-1024-04	TRANSCEIVER, NAV/COMM, KX-155 (28V)	152
069-1024-05	TRANSCEIVER, NAV/COMM, KX-155 (28V)	152
069-1024-08	TRANSCEIVER, NAV/COMM, KX-155 (14V)	150L
069-1024-09	TRANSCEIVER, NAV/COMM, KX-155 (28V)	172N
069-1024-34	TRANSCEIVER, NAV/COMM, KX-155 (28V)	152

PN	DESCRIPTION	MODEL
069-1024-35	TRANSCEIVER, NAV/COMM, KX-155 (28V)	172P
069-1024-39	TRANSCEIVER, NAV/COMM, KX-155 (28V)	152
069-1024-42	TRANSCEIVER, NAV/COMM, KX-155 (14V)	172L
069-1024-43	TRANSCEIVER, NAV/COMM/GS, KX-155 (28V)	152
069-1025-01	VHF COMM TX/NAV RCVR	172L
069-1025-25	COMM NAV, KX165	208
071-01378-0000	RDS81 RT/DA	208B
071-1242-06	SLAVING ACCESSORY	208B
100-0034-03	PROP TACHOMETER	208B
100-5658-01	TACHOMETER, PROP RPM	208B
1234T100-7TZ	INDICATOR, TURN AND BANK	208B
130-380005-7	AIRSPEED INDICATOR	C90A
151CH1	NICAD BATTERY	680
1U149-015-15	ATTITUDE GYRO, VACUUM	208
1U262-001-10	4000B-9, DIRECTIONAL GYRO	172M
1U262-001-11	DIRECTIONAL GYRO	172M
1U262-001-39	DIRECTIONAL GYRO 4000B-30	152
1U262-001-7	DIRECTIONAL GYRO	208B
206-075-187-1	DUAL ENG OIL AND PRESSURE IND.	206B
206-075-188-1	DUAL TRANSMISSION INDICATOR	206B
22-374-B01	ALTIMETER	152
22-977-02	ALTIMETER	150G
23-501-06-16	ATTITUDE GYRO, 5000B-36	152
23-501-06-9	ATTITUDE GYRO	172M
2606011-3	TORQ INDICATOR	208

PN	DESCRIPTION	MODEL
2606011-3RX	TORQ INDICATOR	208
2606013-1RX	TACHOMETER INDICATOR	208B
2606013-2	PERCENT TACHOMETER	208B
2606014-1	PROP TACHOMETER	208B
2606015-4RX	INDICATOR, OIL PRESSURE & OIL TEMPERATURE	208
266-E5542-00	BEACON	208B
2670104-1	ANNUNCIATOR PANEL ASSY	208B
2670104-2	ANNUNCIATOR PANEL ASSY	208B
3000-11	ELT	208
30978-002	BATTERY	525B
4000-11	ELT	182S
405CH10	NI-CAD BATTERY	680
453-0150	ELT 110-4	208B
453-5000	ELT, C406-2	130
453-5000-(999)	ELT, C406-2	130
453-5001	ELT, C406-2 HM	205A-1
453-5002	ELT, C406-1	560 ENCORE
453-5003-(999)	ELT	130
453-5012	ELT MAIN ASSY G406-4	172M
453-5060	ELT, C406-N	208
453-5061	ELT, C406-N HM	206B
453-5068	PROGRAMMING ADAPTER	525B
453-6603	ELT, ME406	152
453-6604	ELT ME406HM	204B
453-6611	ELT, ME406P	206B

PN	DESCRIPTION	MODEL
501-1228-04	EMERGENCY PWR SUPPLY	560XL
501-1712-01	PS-855A, EMERGENCY POWER SUPPLY	180G
501-1712-02	PS-855B, EMERGENCY POWER SUPPLY	560 ENCORE
5035P	ENCODING ALTIMETER	208B
5035P-P45P.45	ENCODING ALTIMETER	208B
5035P-P46	ENCODING ALTIMETER	208B
504-0033-933	ATTITUDE GYRO	208B
504-0111-906	HORIZON REF INDICATOR	208B
5802-01	ITT INDICATOR	208B
5934P-1A.56	ALTIMETER	172N
5934P-3	ALTIMETER 20K	172G
6430017-1	BATTERY TB17, LITHIUM ION	505
6502-3010	DUAL TACH	206B
7000-C32	VERTICAL SPEED IND	152
7000C.31	VERTICAL SPEED INDICATOR	172M
7018341-803	MODE SELECTOR, MS-560	560 ENCORE
7638-44	BATTERY SEALED LEAD ACID	560
787-6173-016	FLIGHT DIRECTOR INDICATOR, ADI-84	C90A
8140B-S35LW-28V	ENCODING ALTIMETER	U206G
821101-1	ELT	180F
9009-3003	INDICATOR, DUAL ENG OIL TEMP. & PRESS.	206B
9015607	BATTERY, STANDBY	208B
9914058-11	BATTERY	550
9914058-6	BATTERY	680
A3-06-2880	ELT 345	150M

PN	DESCRIPTION	MODEL
AK-450	ELT	170B
C589510-0102	SHARC 7 ELT	150B
C661014-0101RX	INDICATOR, ALTIMETER	208B
C661053-0101	DIRECTIONAL GYRO	208B
C661064-0237	AIRSPEED INIDICATOR,EA-5172	208
C661065-0106	AIRSPEED INDICATOR EA-5174-12-CES	152
C662504-0101	VOLT/AMMETER INDICATOR	208B
C668540-0102	SUCTION GAUGE	208B
DK120	BEACON	560 ENCORE
DM ELT 6	ELT	182Q
DMELT6.1	ELT	172H
E-01	ELT	172A
E-04	ELT 406 MHZ	690A
EA-5172-45-CES	AIRSPEED IND	208B
EA5175-52-CES	AIRSPEED INDICATOR	208B
ELT-10	ELT	182
H10-13.4	HEADSET MODEL H10-13.4	208B
HEADSET	HEADSET	180J
MD82-3	TORQUE INDICATOR	208B
MX170B	NAV COMM	C24R
N834-9001	ALT INDICATOR	60
RCA41-03	TACHOMETER, NG	208B
RCA41A-03	PERCENT TACHOMETER INDICATOR	208B
RG-222	LEAD ACID BATTERY	206L-1
RG-380E/44	LEAD ACID BATTERY	208B

PN	DESCRIPTION	MODEL
RG-380E/44LA2	LEAD-ACID AIRCRAFT BATTERY	560 ENCORE
RG-380E/44LA5	BATTERY	550
S1821502-02	ELT - KANNAD - 406 AF	550
S1822502-02	ELT, 406AF-H	206B
S1840501-01	ELT, 406 AF-COMPACT	120
S1851501-02	Kannad Integra AF ELT	208
SM400D37	CONTACTOR	208
SPC-10 (PW)	STATIC INVERTER	U206F
SSD120-30N	ALTITUDE ENCODER	180J
VR-1010-24-2A	VOLTAGE REGULATOR	206B

HELICOPTER AIRCRAFTS

79 Capabilities



PN	DESCRIPTION	MODEL
064-01053-0030	VHF, KY197A 25K, 14VDC	R22
064-1054-30	TRANSCEIVER, VHF COMM, KY-196A	AS 350 B-2
064-1054-60	VHF COMM	R44 II
066-01156-0101	TRANSCEIVER, XPDR, KT-76C	R44 II
066-01176-0101	AUDIO MKR/INTERCOM/STERO/SPLIT	AEROSTAR 601P
101720-11810	ALTIMETER PRESSURE	S-76A
102-0059-01	ATTITUDE GYRO	S-76A
20020-11293	AIRSPEED INDICATOR	S-76A
2013-1A	BATTERY PACK ASSEMBLY	AB139
2778-1	BATTERY	AB139
28702-525	ENCODING ALTIMETER	S-76A
28702-536	ENCODING ALTIMETER	S-76A
310-007-003	DUAL TORQUE INDICATOR	S-76B
33204-002	NI-CAD BATTERY	AB139
409CH2	BATTERY, NI-CAD	EC 135 T2+
453-0150	ELT 110-4	A36
453-0150-01	ELT100 HM	S-76A
453-0150-02	ELT 110-6	S-76A
453-5001	ELT, C406-2 HM	AB139
453-5003	ELT C406-1HM	AS 350 B2
453-5061	ELT, C406-N HM	AS 332L
453-5068	PROGRAMMING ADAPTER	AS 350 B-2
453-5078	PROGRAM ADAPTER	S-61N
453-6603	ELT, ME406	ELITE
453-6604	ELT ME406HM	AS 350 B-2

PN	DESCRIPTION	MODEL
501-1228-03	AUX PWR SPLY PS-835C	EC 135 T2+
501-1228-04	EMERGENCY PWR SUPPLY	S-76A
501-1712-01	PS-855A, EMERGENCY POWER SUPPLY	S-76A
501-1712-02	PS-855B, EMERGENCY POWER SUPPLY	S-76A
501-1712-03	POWER SUPPLY, EMERG, PS855	S92A
5035P2-P42	ENCODING ALTIMETER	S-76A
5934PD-3	ALTIMETER	EA 300/L
60-1321-1	BATTERY POWER SUPPLY	S-76B
622-1233-001	RECEIVER DME-40	S-76A
622-1270-001	TRANSPONDER, TDR-90	S-76A
622-1879-001	TRANSCEIVER, VHF, VHF-20A	S-76A
622-2362-001	RECEIVER, ADF, ADF-60	S-76A
622-3920-001	DME INDICATOR	S-76A
622-6520-007	CONTROL, VHF COM, CTL-22	S-76C
622-6521-015	CONTROL, NAV, CTL-32	S76C
622-6522-007	CONTROL, ADF, CTL-62	S-76C
7002353-902	AIR DATA SENSOR	S-76B
7638-44	BATTERY SEALED LEAD ACID	S-76A
76450-01076-103	TRIPLE TACH	S-76A
76450-01076-107	T5 TURBINE TEMP INDICATOR	S-76A
76450-01078-112	TRANS. OIL TEMP/PRESSURE IND.	S-76A
7707-111A25-1	PRESSURE TRANSMITTER	S-61N
7813-175-00-13X	NR TRI-TACH	AS 355 F2
822-1120-007	CTL-22C	S76C2
8503-S20LW	ALTIMETER	S-76A

PN	DESCRIPTION	MODEL
8503-S20LWMB	ALTIMETER	S-76C+
8503-S20LWMB5V	ALTIMETER	S-76A
A-1077B	RELAY	S-76A
A-1077W	RELAY	S-76A
A3-06-2880	ELT 345	A36TC
A35-MA-10-L-1	ALTIMETER IND	S-61N
DK120	BEACON	S-61N
DK120/90	BEACON	S-76B
DK140	ULB	S-76A
DK290-11	ULB	S-76C
DM ELT 6	ELT	S-76A
DMELT8.1	ELT	S-76A
EE0005-0111	STANDBY BATTERY	AS332L1
ELT 8.1	ELT	S-76A
ELT-10	ELT	A36
H321AFM1	GYRO HORIZON	S-76A
RG-355	LEAD ACID BATTERY	AS 350 B-2
RG-380E/44	LEAD ACID BATTERY	S-76A
RG-390E	LEAD ACID BATTERY	S-76B
S1820502-02	ELT, KANNAD 406AP	EC225 LP
S1820502-04	ELT	S-76B
S1821502-02	ELT - KANNAD - 406 AF	EC225 LP
S1822502-02	ELT, 406AF-H	AS 350 B-2
S1825502-02	CS144-A, NAV-ELT INTERFACE	EC225 LP
S1840501-01	ELT, 406 AF-COMPACT	AS 350 B-2

PN	DESCRIPTION	MODEL
S1840501-01M	ELT	AS 355 N
S1851501-02	Kannad Integra AF ELT	AS350 B3
S1854501-01	ELT, AP-H INTEGRA (ER)	AS 350 B3
SSD120-30A	ALTITUDE DIGITIZER	S-61N